




Transmission Draining and Filling

Materials

Name	Specification
Motorcraft® Dual Clutch Transmission Fluid XT-11-QDC	WSS-M2C200-D2


Filling

1. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
3. If equipped.
Remove the underbody shield.
 1. Remove the air deflector.
 2. Remove the underbody shield.

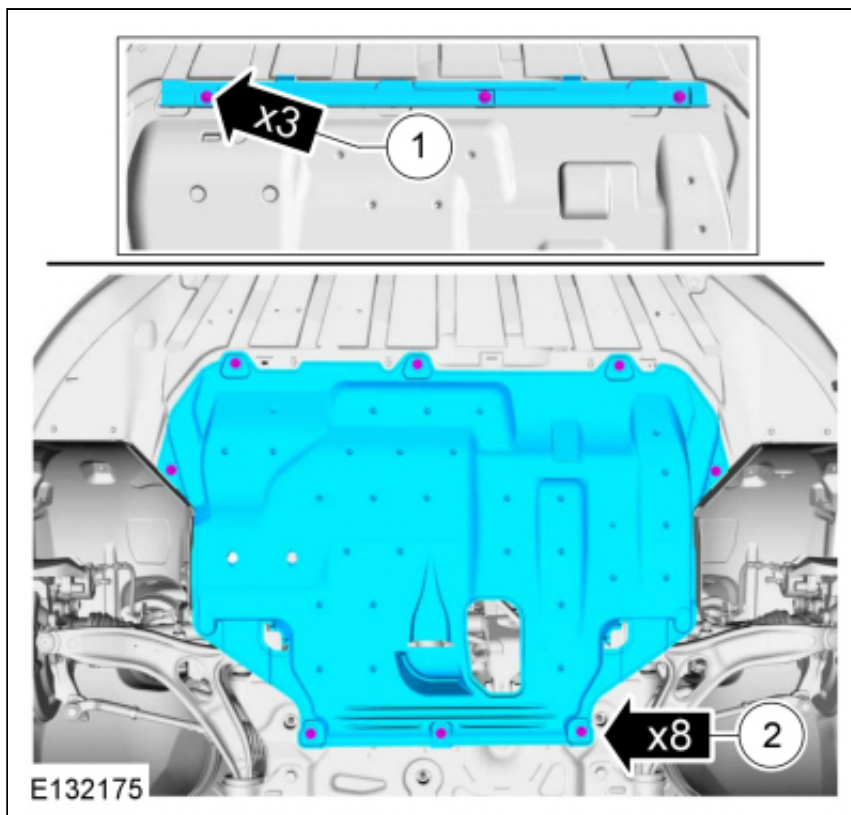

4. **NOTICE:** Be prepared to collect escaping fluid.


Remove the fill plug, the drain plug and drain the transmission fluid.

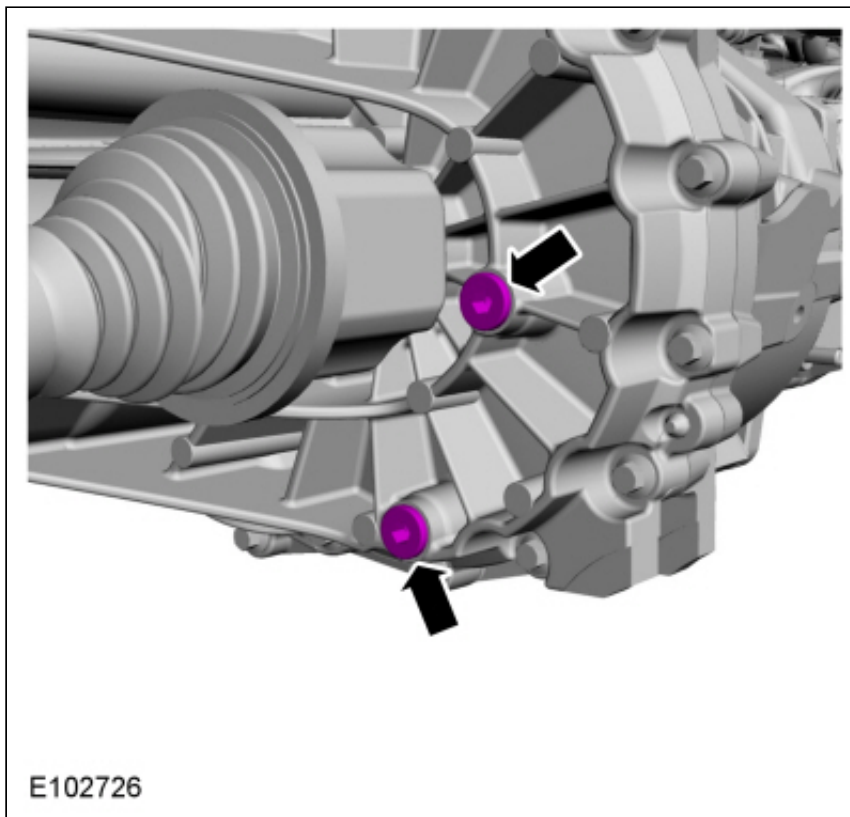


5. Install the drain plug and add or remove transmission fluid as necessary.

Material: Motorcraft® Dual Clutch Transmission Fluid / XT-11-QDC (WSS-M2C200-D2)

Torque: 26 lb.ft (35 Nm)

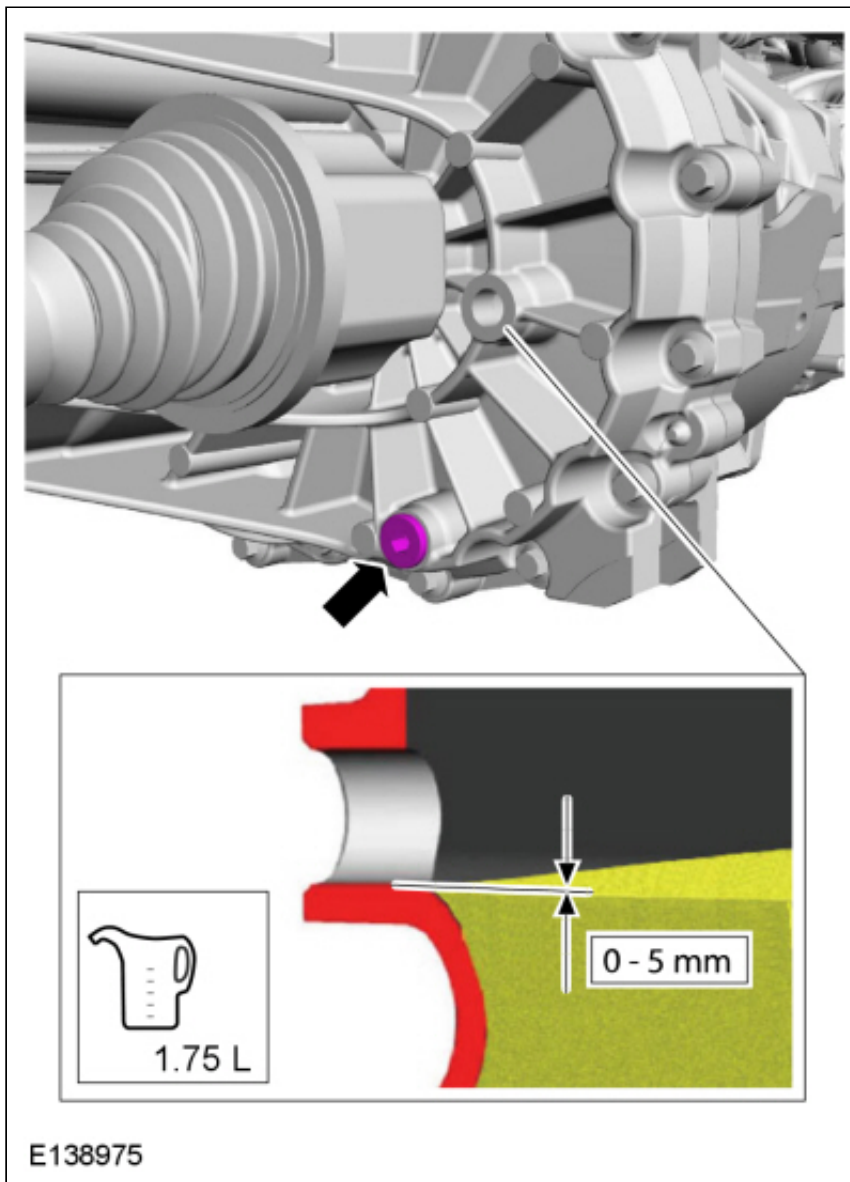


6. Install the fill plug.
Torque: 26 lb.ft (35 Nm)

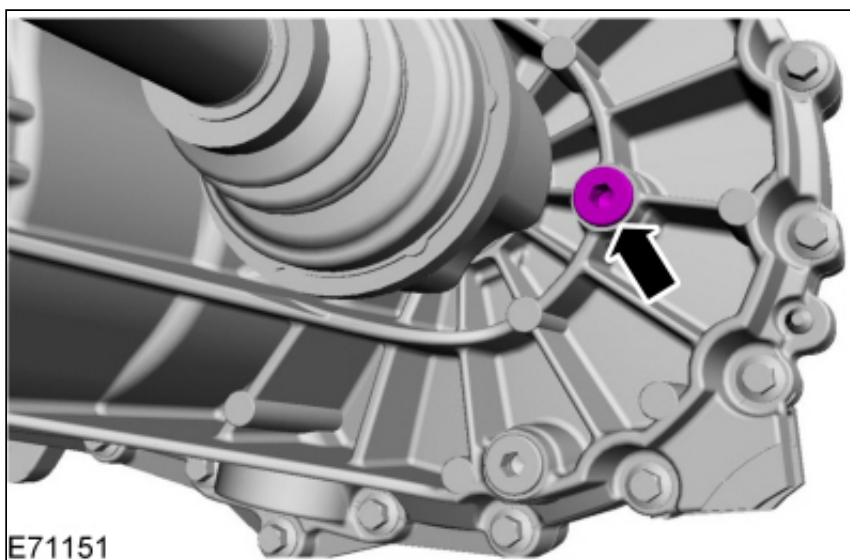

7. If equipped.

Install the underbody shield.

1. Install the underbody shield.
2. Install the air deflector.

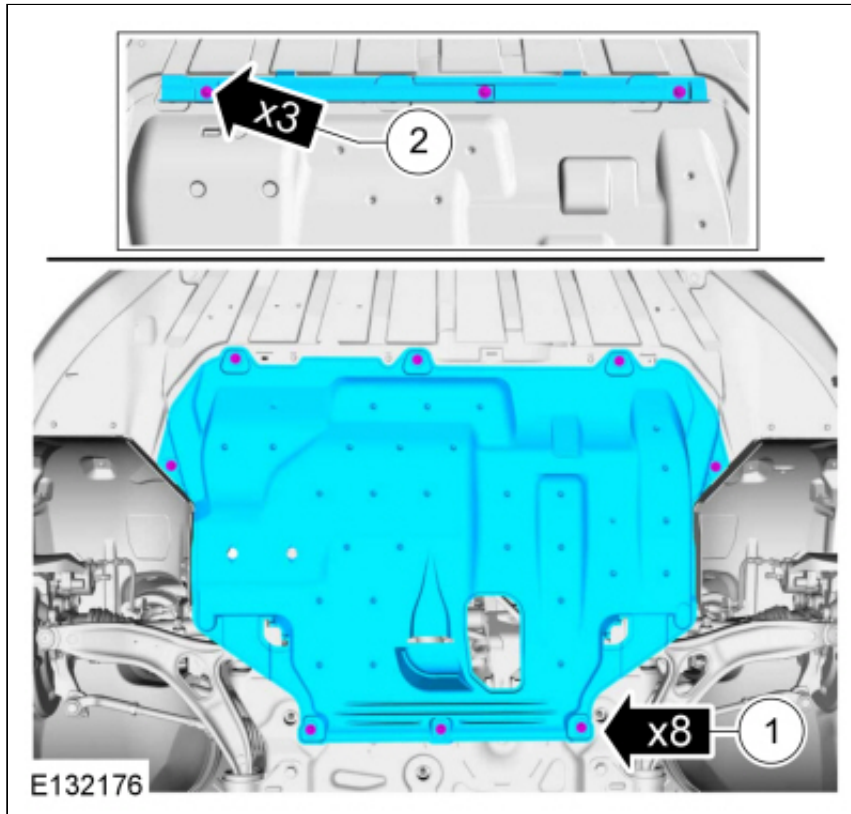

8. Lower the Vehicle.

Copyright © 2016 Ford Motor Company

